



Hellas Sat 2

Frequency Plan

Uplink

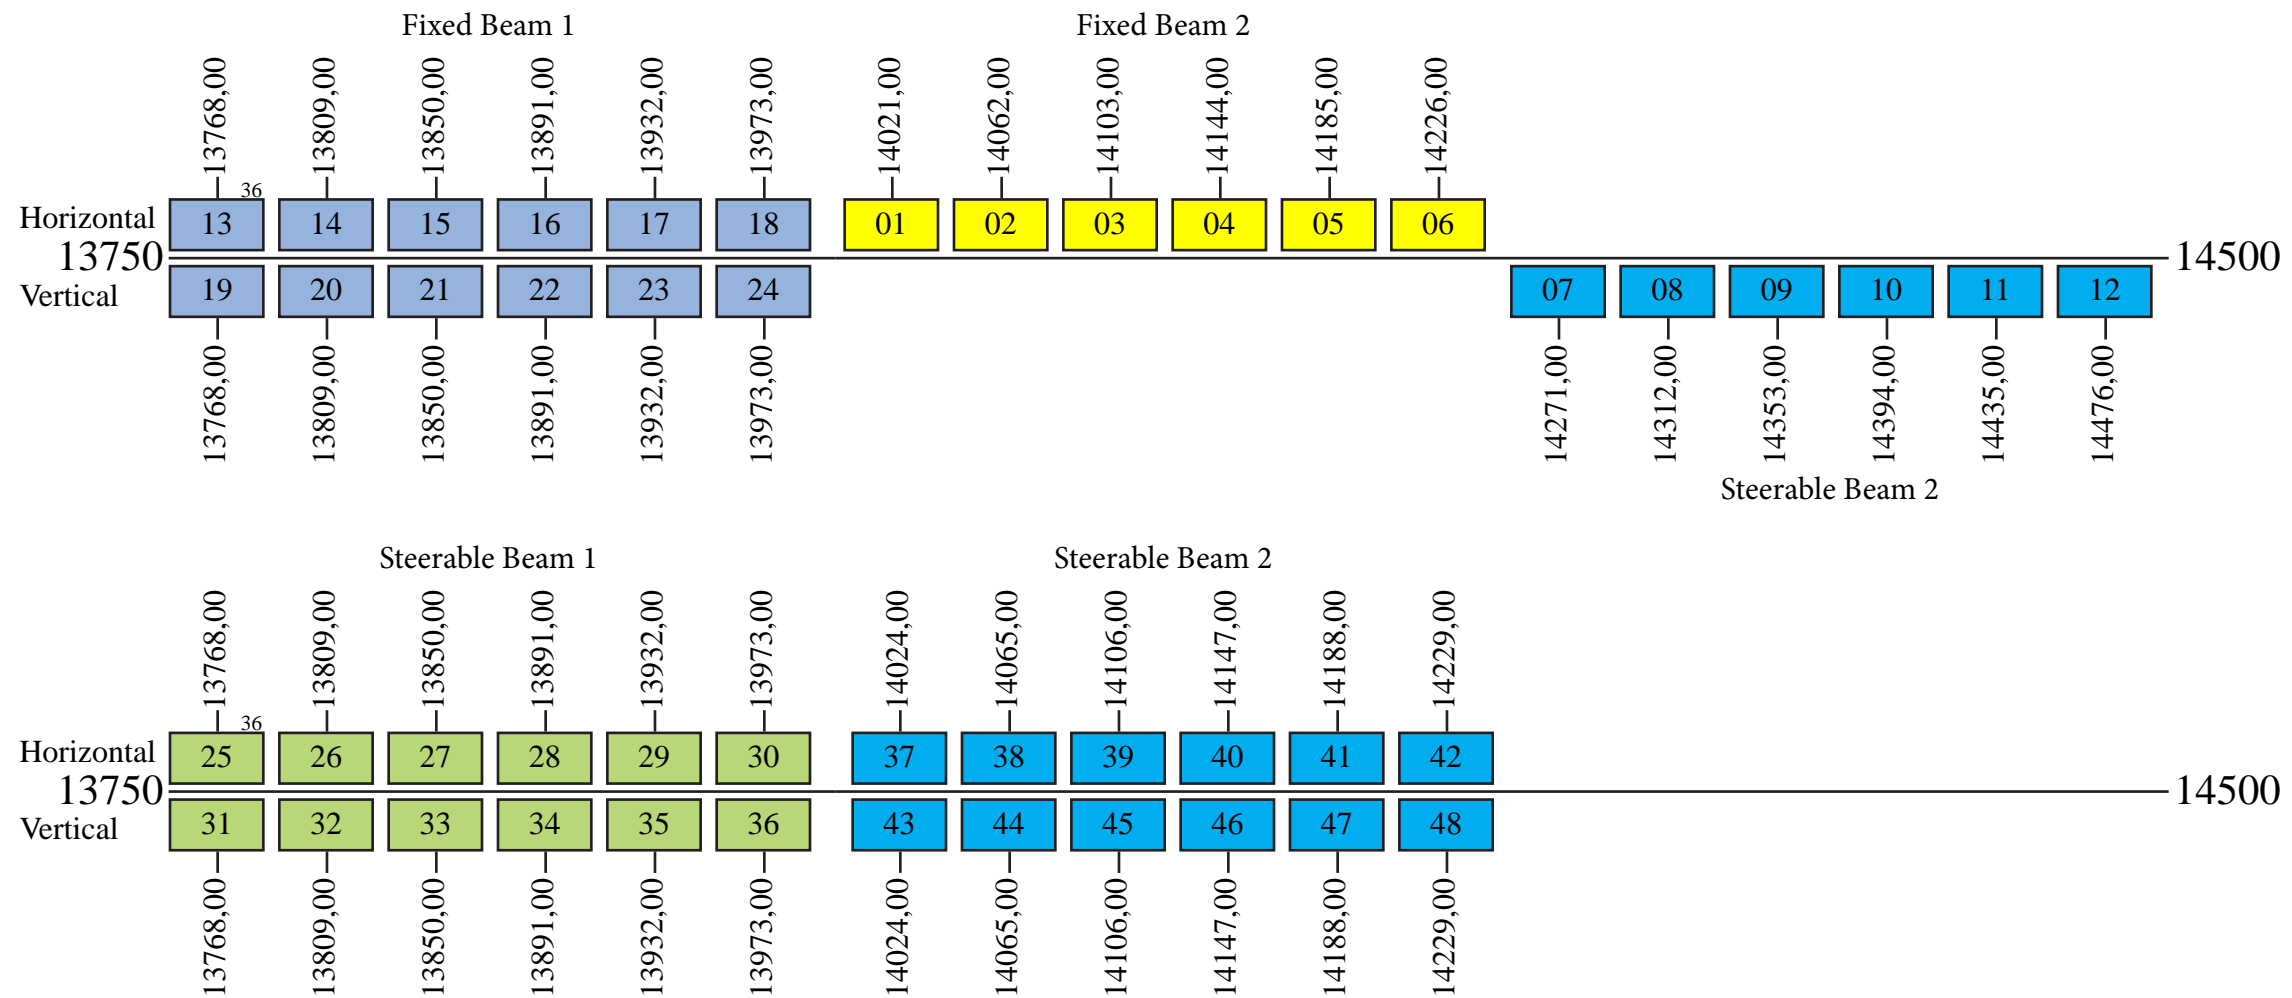

Downlink

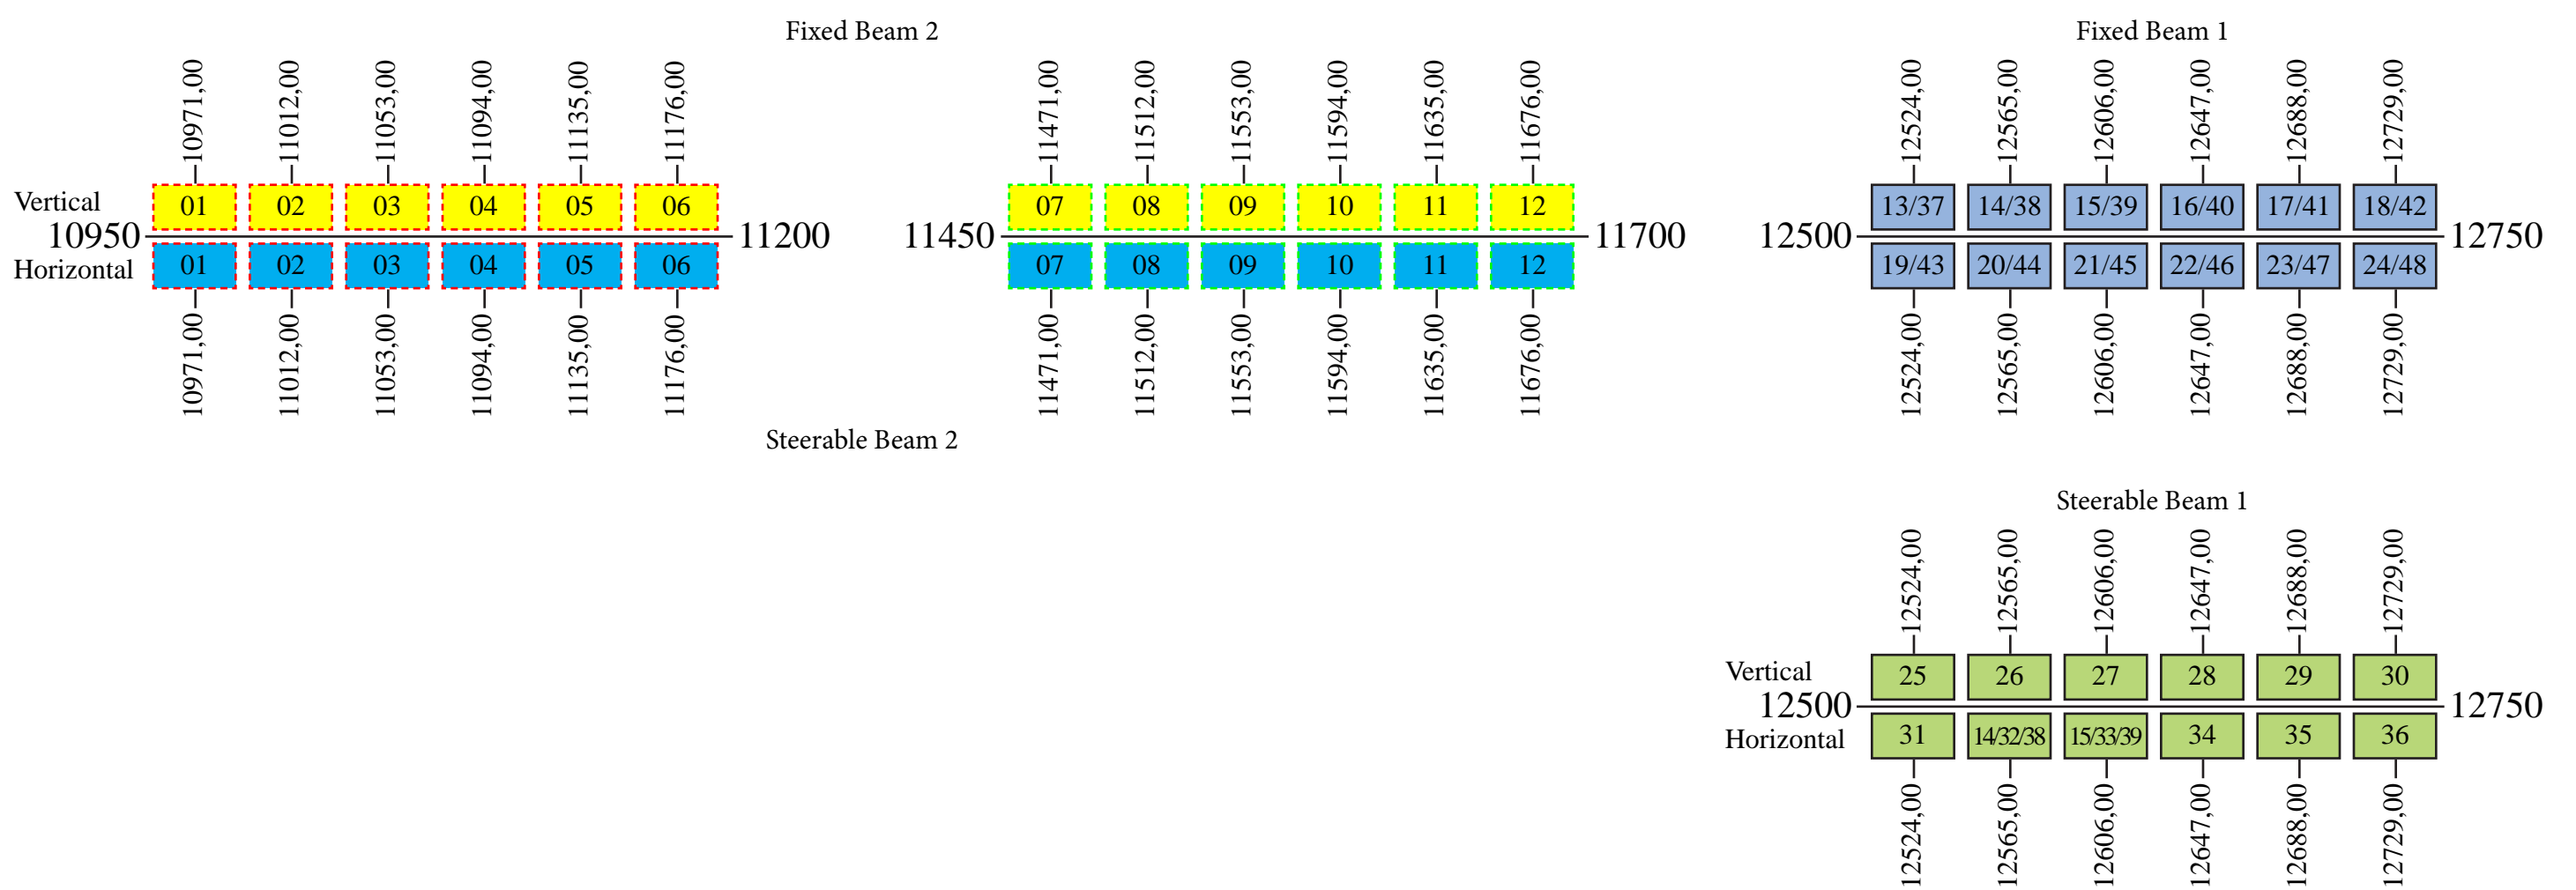

- Note: 1) The downlink channels 01-06, 07-12, 25-30 can be switched on channel by channel basis but cannot operate simultaneously more than 12. Switching will follow the block order (01,07,30), (02,08,29), (03,09,28), (04,10,27), (05,11,26), (06,12,25).
- 2) Channels 37 up to 48 of beam Steerable 2 can be downlinked on a channel by channel basis.
- 3) Channels 32,33 of Steerable 1 can be linked with channels 14,15 of beam Fixed 1 and /or channels 38,39 of beam Steerable 2.
- 4) When beam Fixed 2 in downlinked in beam Steerable 2, then beam Steerable 2 to be downlinked to beam Fixed 2.
- 5) 30 total transponders are active all the time.