
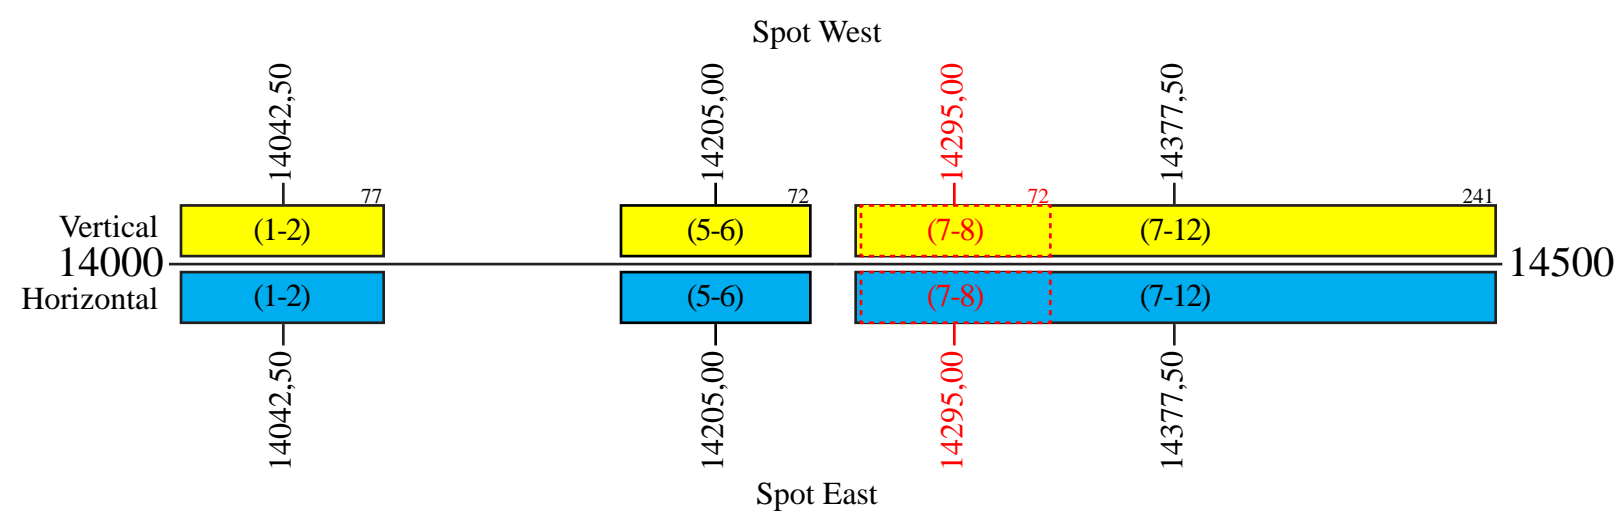




# Intelsat Series 5

## Frequency Plan

### Uplink

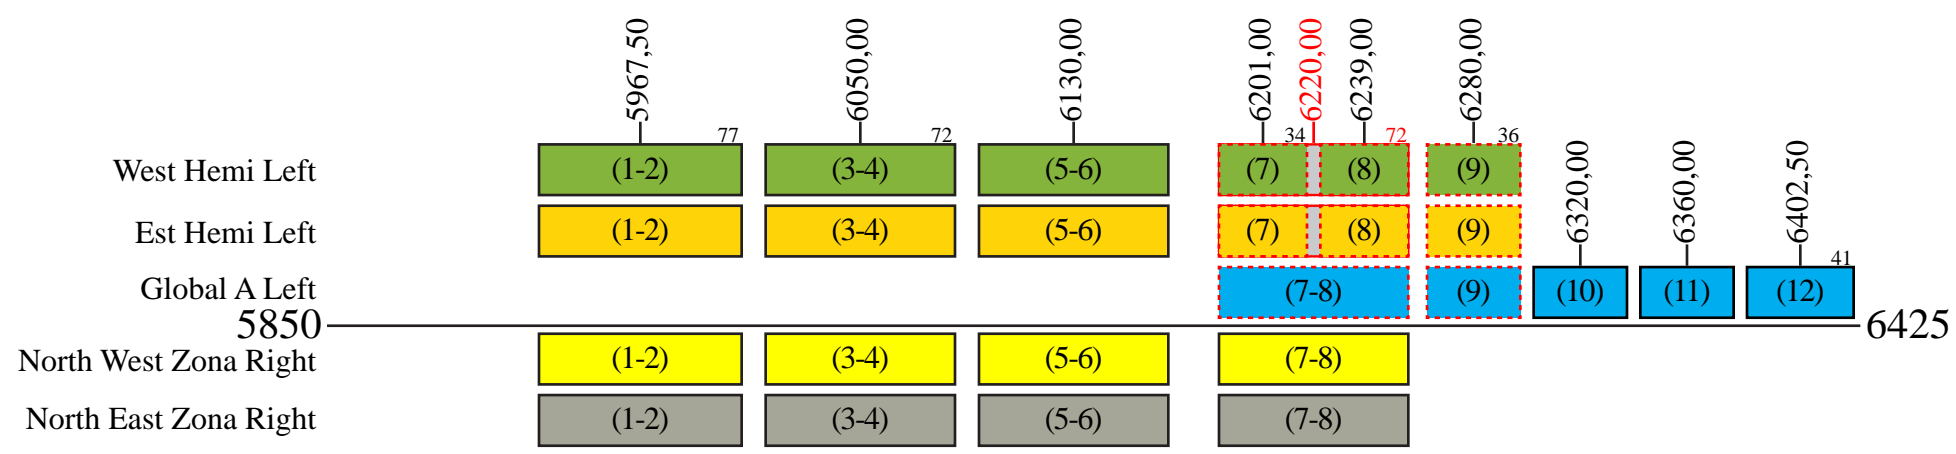

### Downlink

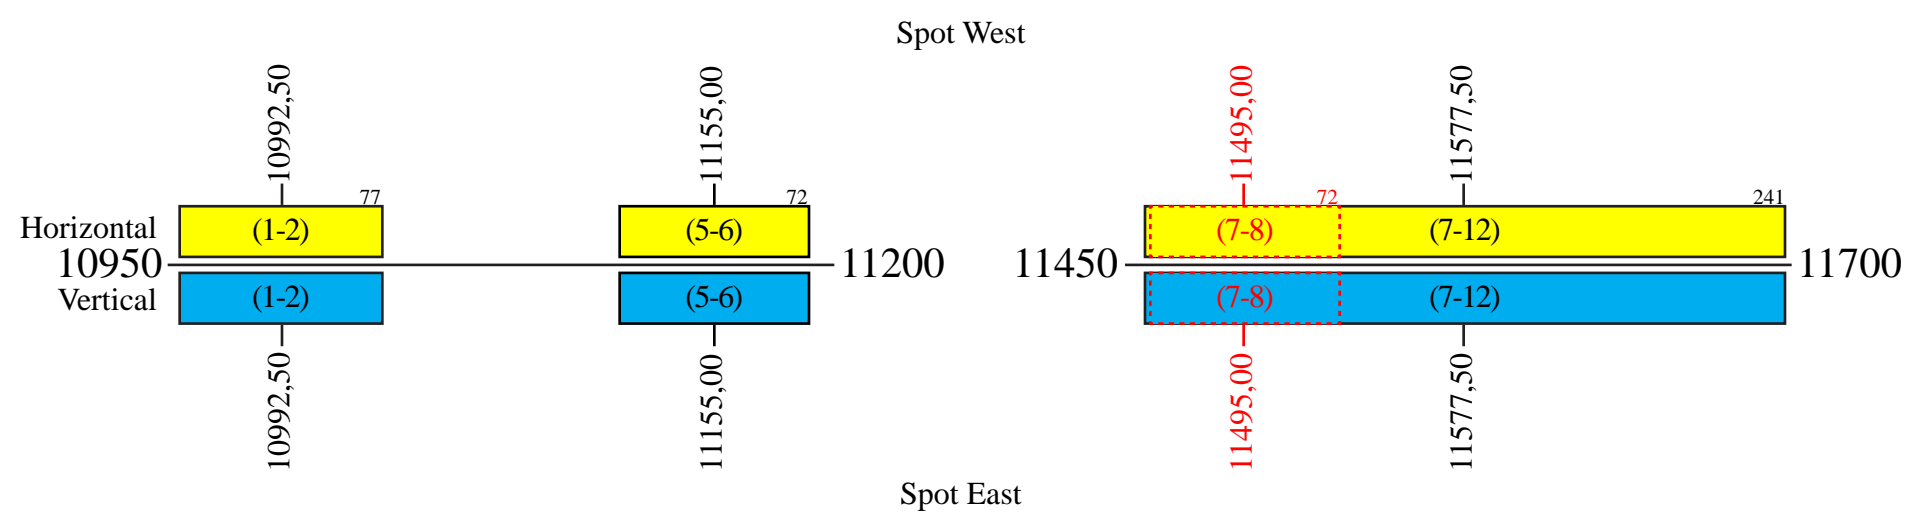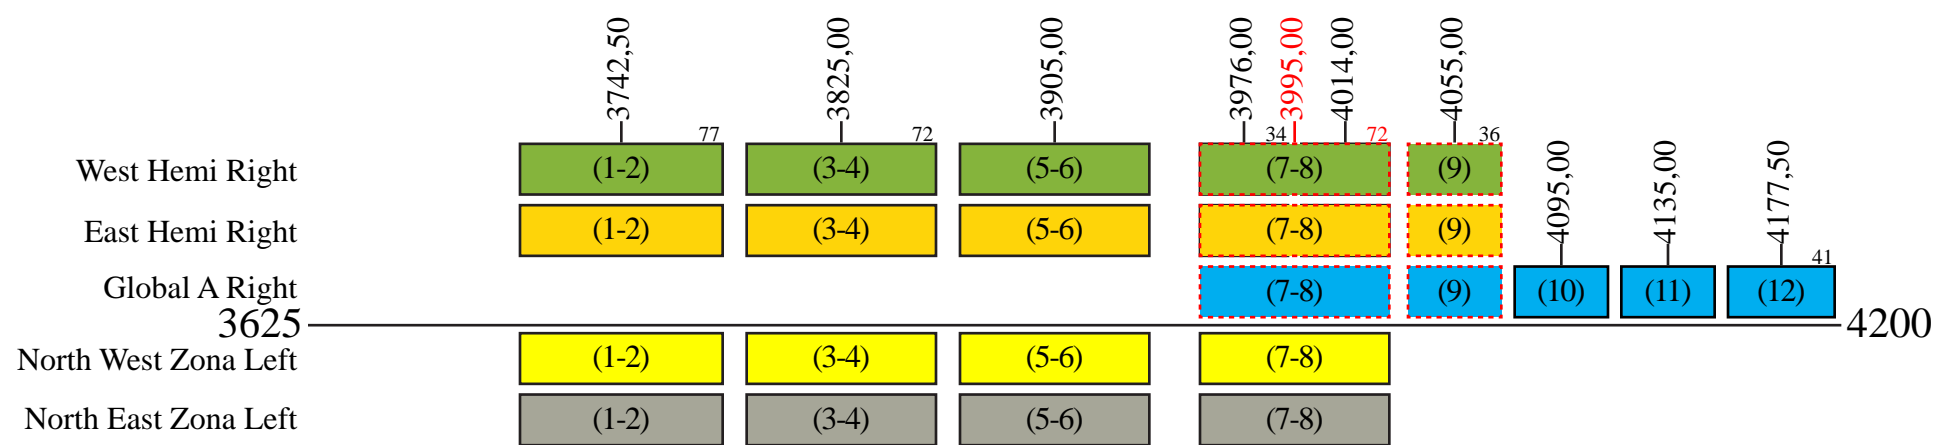

## Interconnection

Slot Uplink	Beam Uplink	Slot Downlink	Beam Downlink
1-2, 3-4, 5-6, 7, 8, 9	EH,WH	1-2, 3-4, 5-6, 7-8, 9	East Hemi
3-4, 5-6	EZ,WZ	3-4, 5-6	
1-2, 5-6	ES,WS	1-2, 5-6	
1-2, 3-4, 5-6, 7, 8, 9	EH,WH	1-2, 3-4, 5-6, 7-8, 9	West Hemi
3-4, 5-6	EZ,WZ	3-4, 5-6	
1-2, 5-6	ES,WS	1-2, 5-6	
7, 8, 9	EH,WH	7-8, 9	Global A
7-8, 9, 10, 11, 12	GA	7-8, 9, 10, 11, 12	
5-6	EH,WH	5-6	East Zone
1-2, 3-4, 7-8	EZ,WZ	1-2, 3-4, 7-8	
5-6, 7-8	ES,WS	5-6, 7-8	
5-6	EH,WH	5-6	West Zone
1-2, 3-4, 7-8	EZ,WZ	1-2, 3-4, 7-8	
5-6, 7-8	ES,WS	5-6, 7-8	
1-2, 5-6, 7-12	ES,WS	1-2, 5-6, 7-12	East Spot
5-6, 7-8	EZ,WZ	5-6, 7-8	
1-2, 5-6	EH,WH	1-2, 5-6	
1-2, 5-6, 7-12	ES,WS	1-2, 5-6, 7-12	West Spot
5-6, 7-8	EZ,WZ	5-6, 7-8	
1-2, 5-6	EH,WH	1-2, 5-6	