
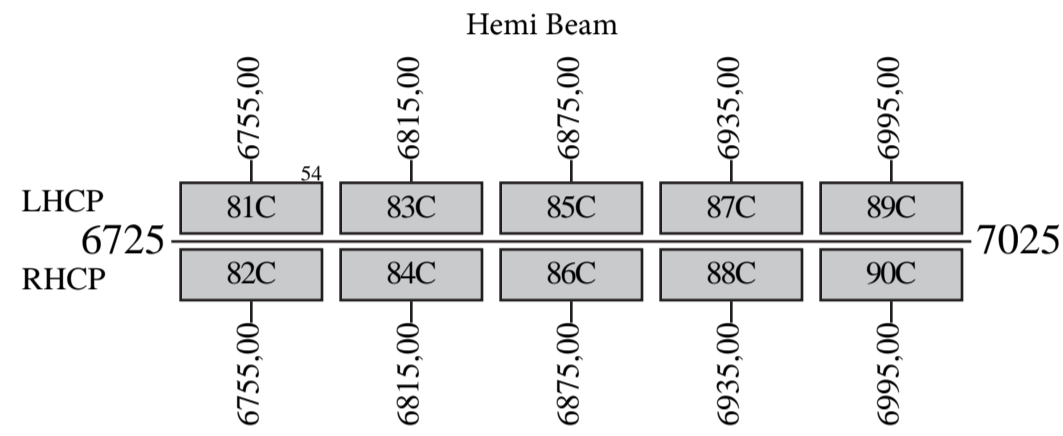




SES-6

Frequency Plan C-Band

Uplink

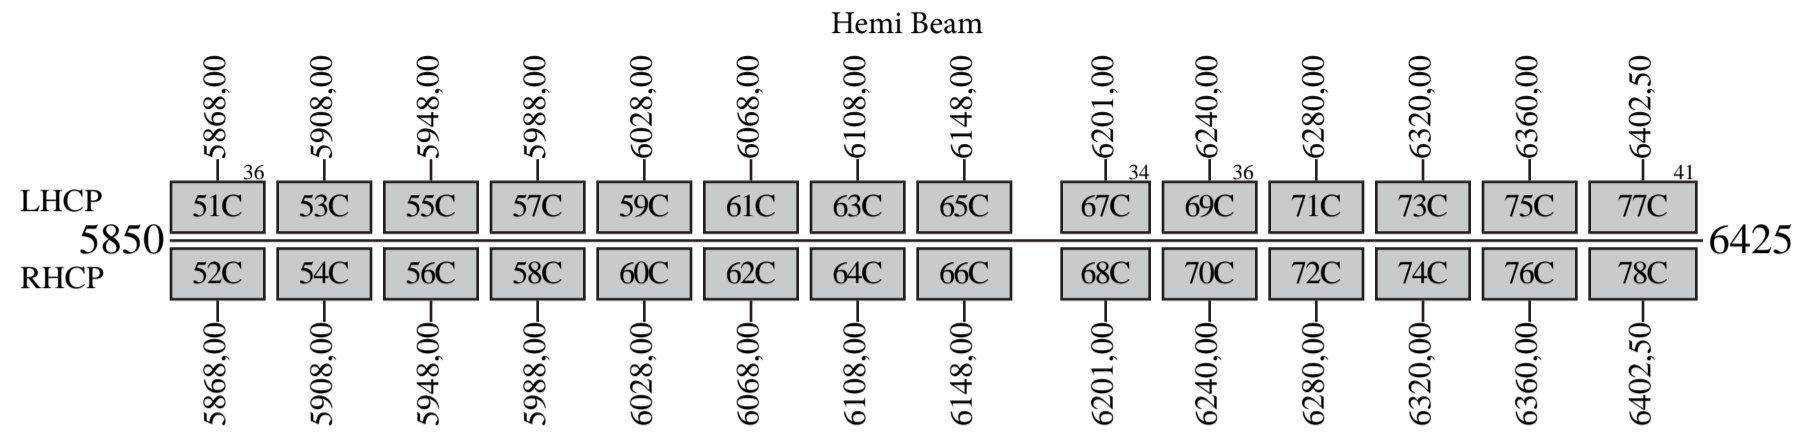

Downlink

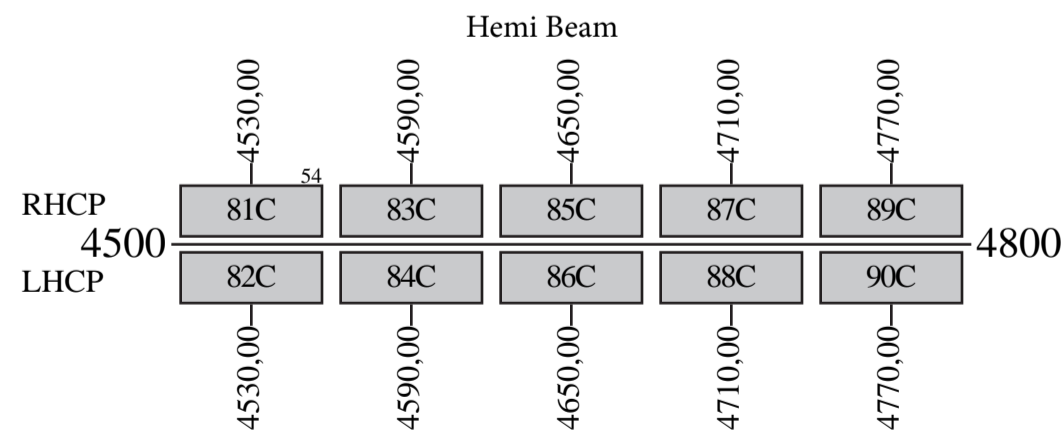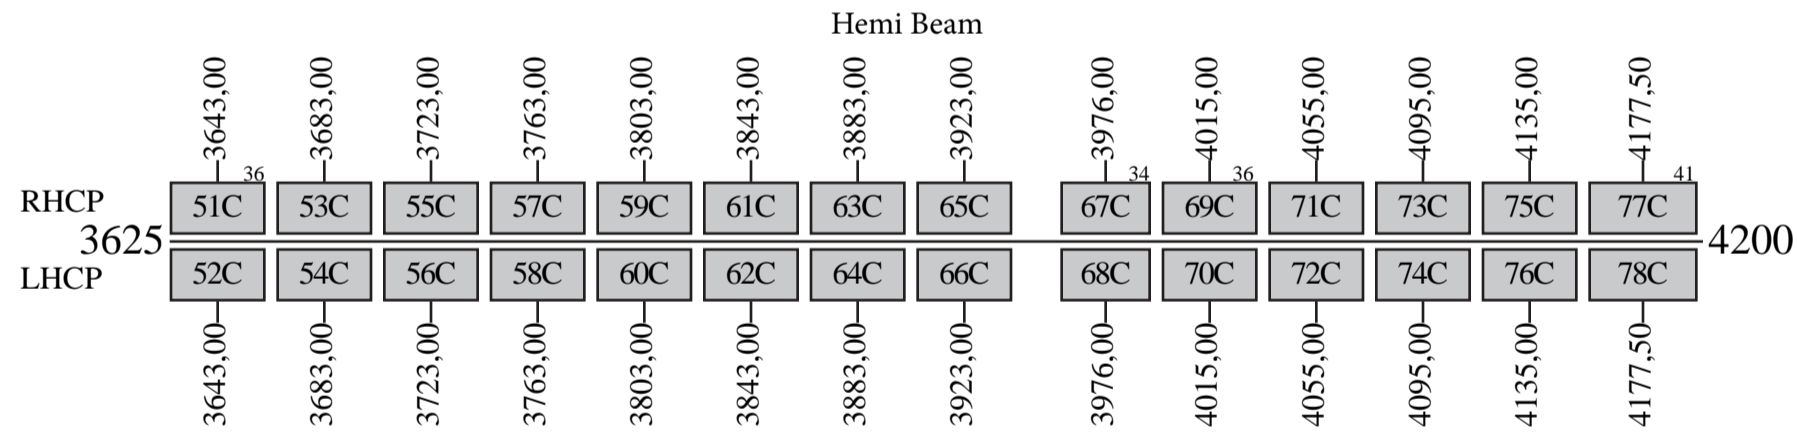


Command 1: 14000,00 V Global Beam (Emergency L or R Omni Beam)
 Command 2: 14499,00 H Global Beam (Emergency L or R Omni Beam)
 Telemetry 1: 11701,00 H or V Global Beam (Emergency L or R Omni Beam)
 Telemetry 2: 11700,50 H or V Global Beam (Emergency L or R Omni Beam)
 Telemetry 3: 12199,50 H Global Beam (Emergency L or R Omni Beam)
 Beacon 1: 3947,50 Linear (45°) Global Beam
 Beacon 2: 4500,10 Linear (135°) Global Beam


SES-6

Frequency Plan Ku-Band

Uplink

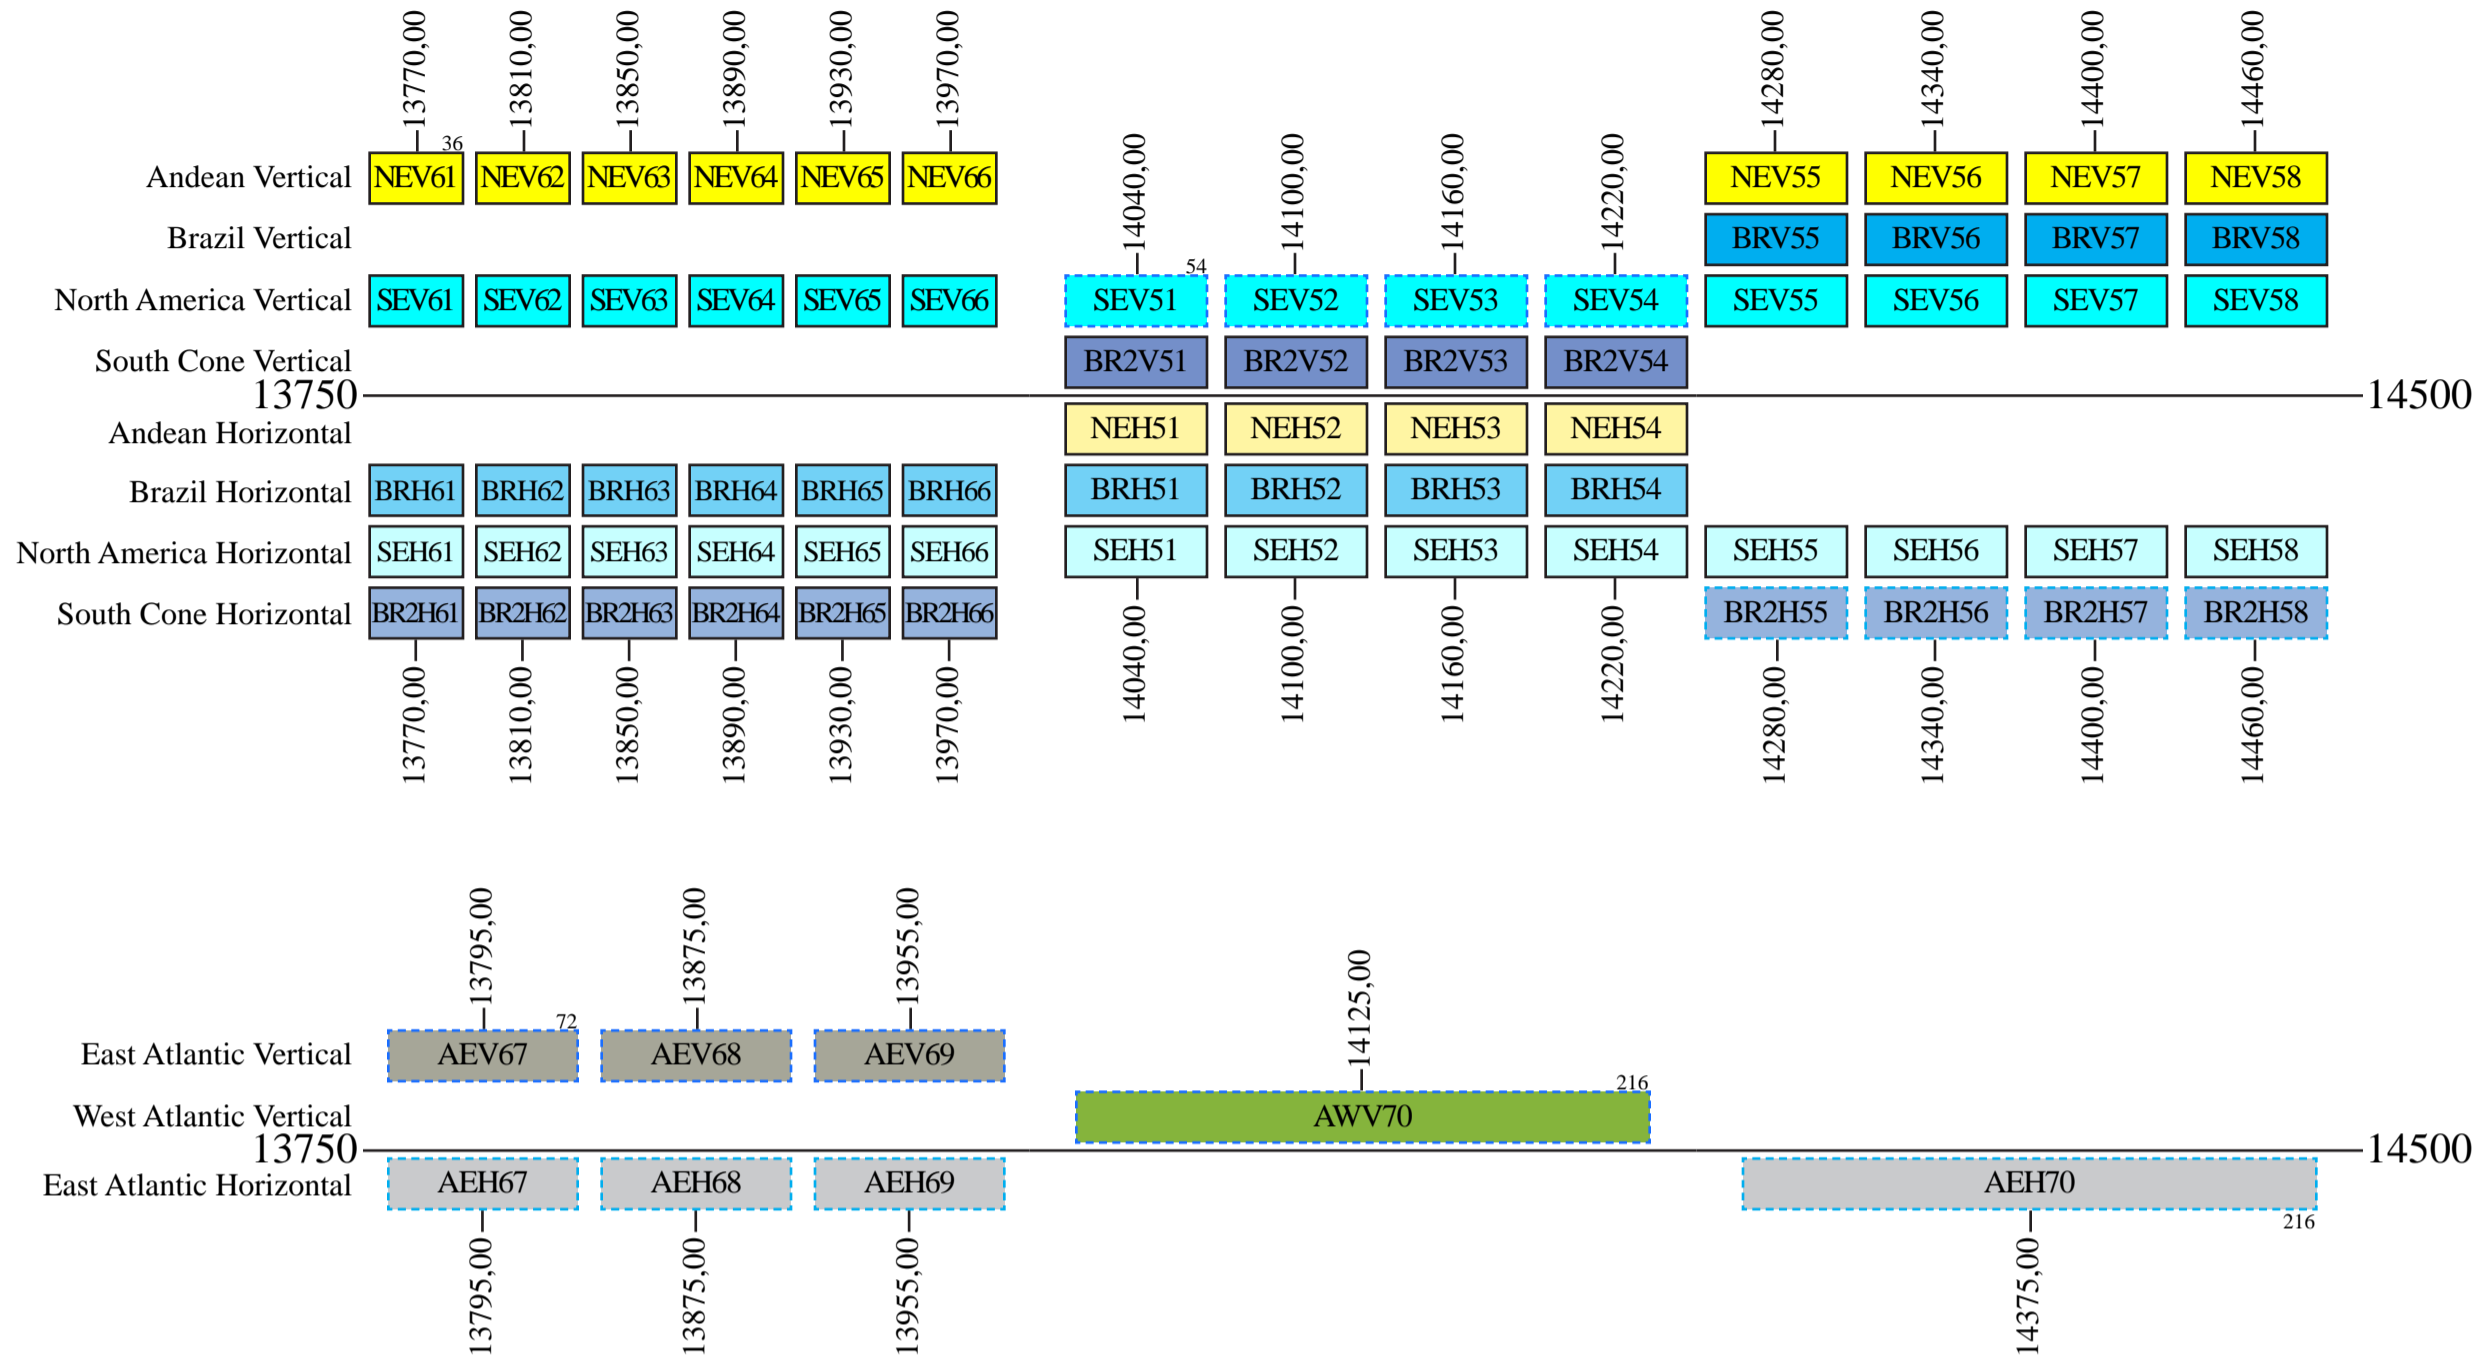

Downlink

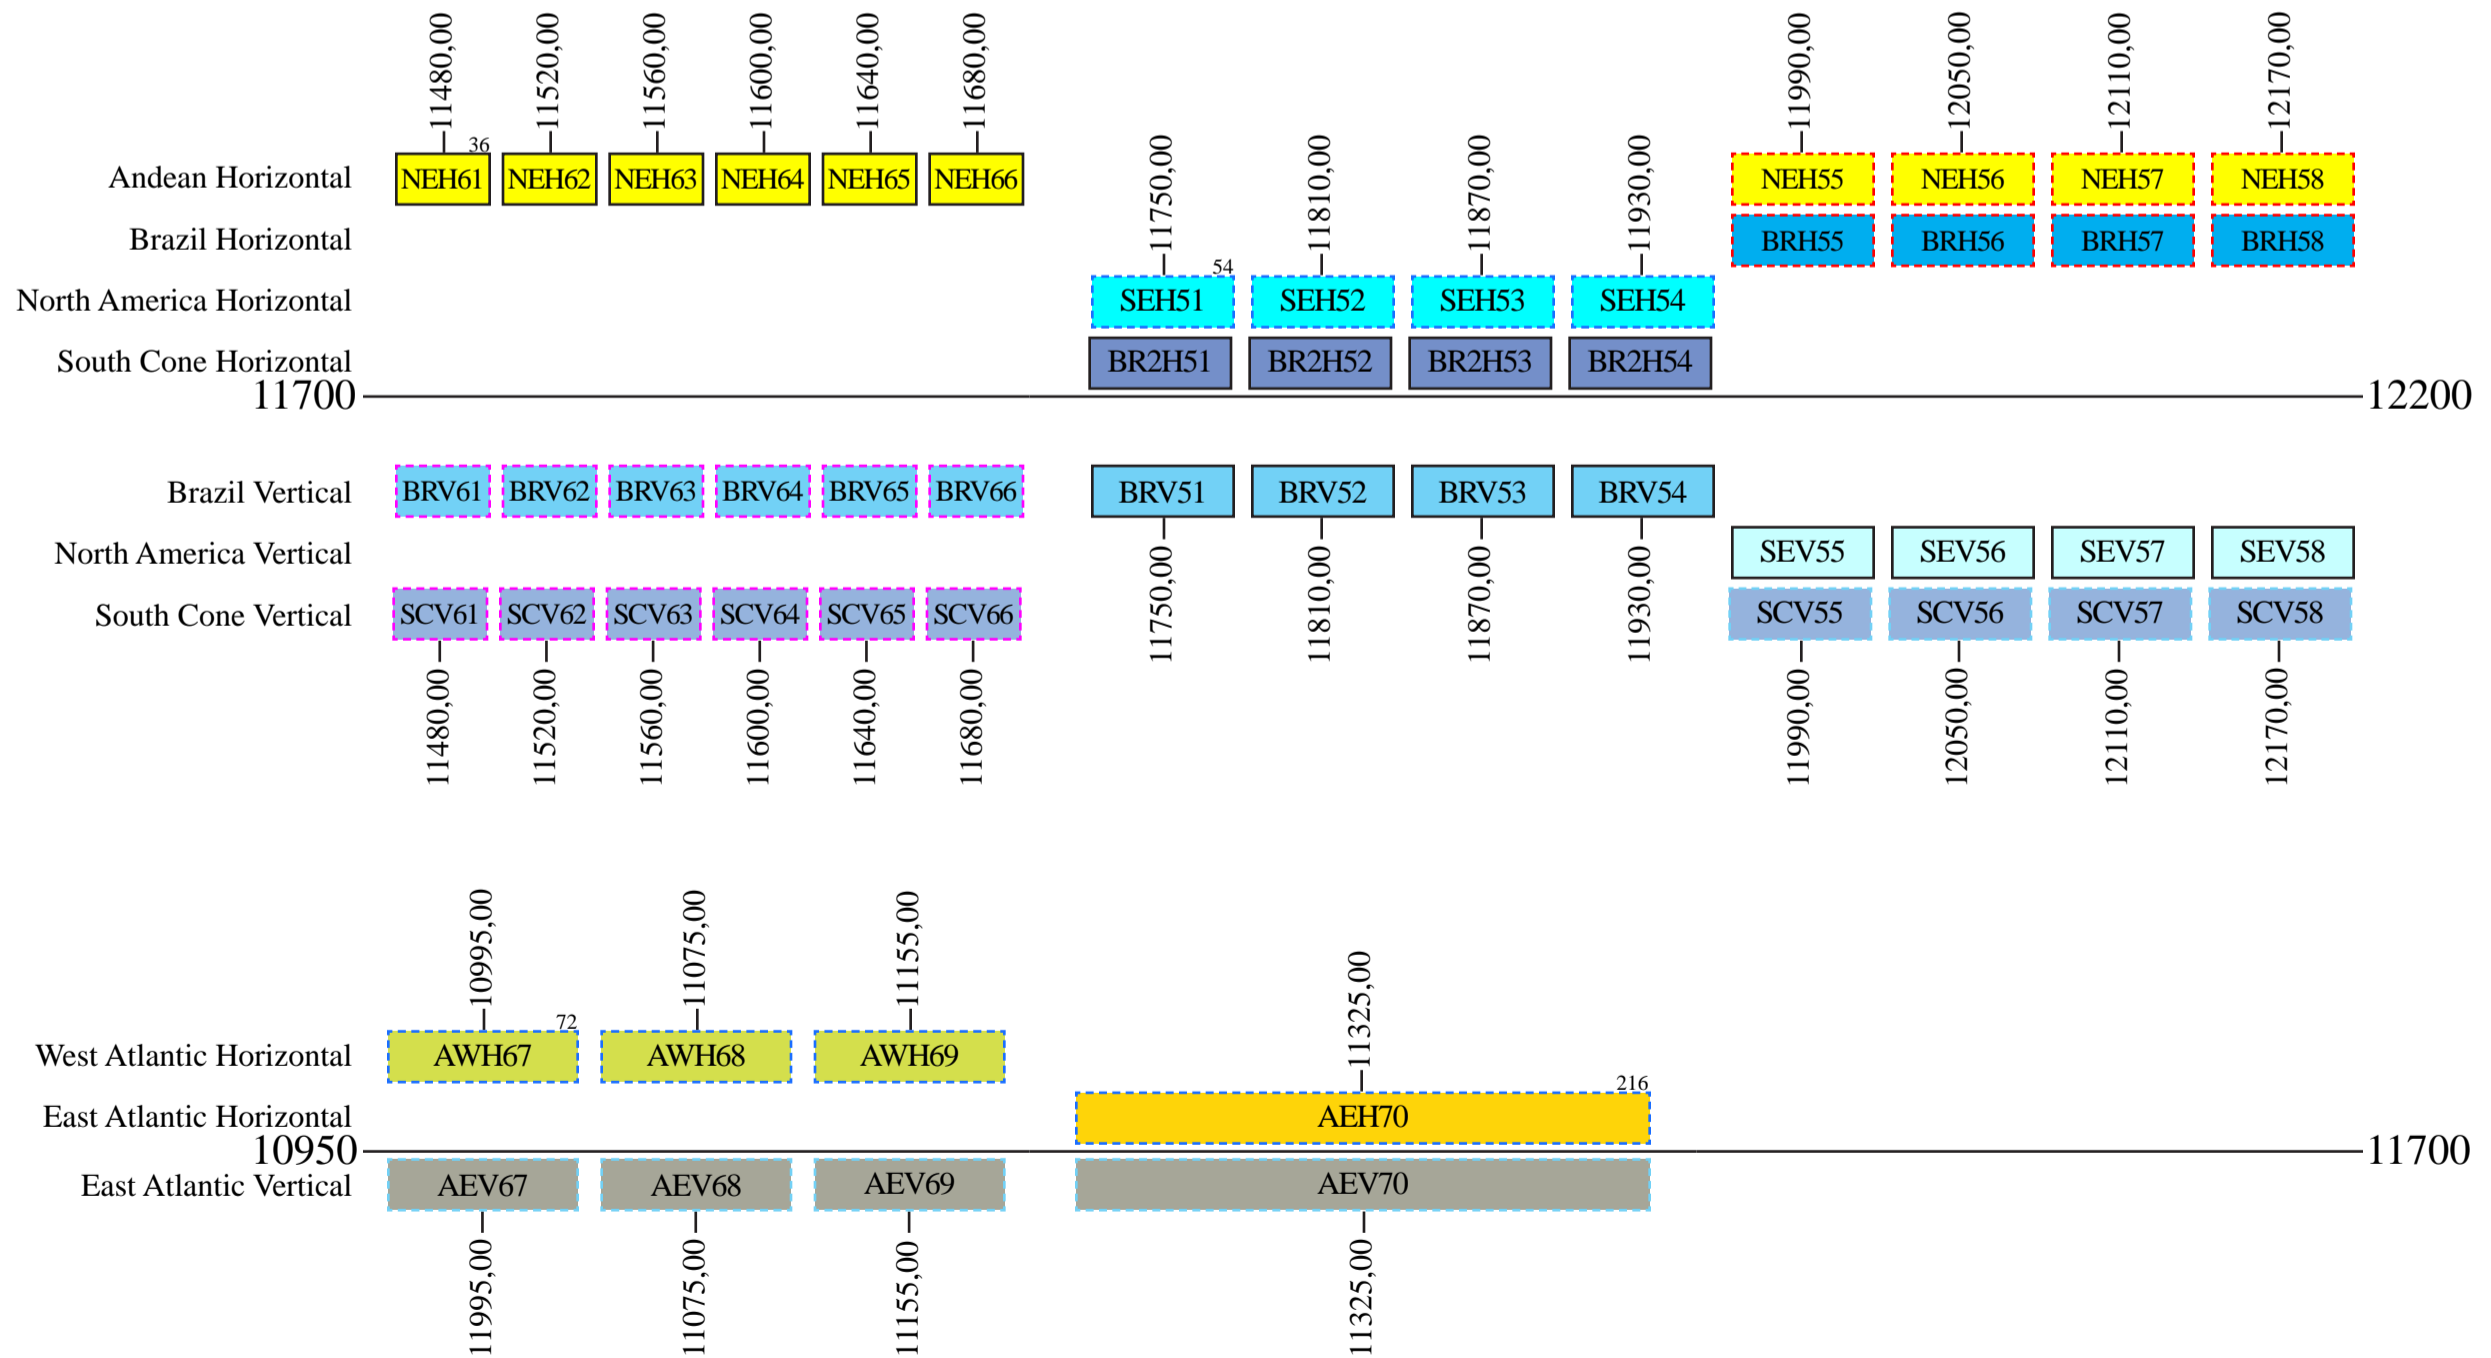

Switchable between North America Beam or West/East Atlantic Beam.

Switchable between Brazil Beam or Andean Beam.

Switchable between Brazil Beam or South Cone Beam.

Switchable between South Cone Beam or East Atlantic Beam.

Interconnections

Transponder Uplink	Beam Uplink	Transponder Downlink	Beam Downlink
51C to 78C	Hemi	51C to 78C	Hemi
81C to 90C	Hemi	81C to 90C	Hemi
NEV61 to NEV66 BRH61 to BRH66 SEV61 to SEV66 BR2H61 to BR2H66	Andean Brazil North America South Cone	NEH61 to NEH66	Andean
NEV55 to NEV58 BRV55 to BRV58 SEH55 to SEH58 SEV55 to SEV58 BR2H55 to BR2H58	Andean Brazil North America North America South Cone	NEH55 to NEH58	Andean
NEV61 to NEV66 BRH61 to BRH66 SEH61 to SEH66 BR2H61 to BR2H66	Andean Brazil North America South Cone	BRV61 to BRV66	Brazil
NEH51 to NEH54 BRH51 to BRH54 SEV51 to SEV54 SEH51 to SEH54 BR2V51 to BR2V54	Andean Brazil North America North America South Cone	BRV51 to BRV54	Brazil
NEV55 to NEV58 BRV55 to BRV58 SEH55 to SEH58 SEV55 to SEV58 BR2H55 to BR2H58	Andean Brazil North America North America South Cone	BRH55 to BRH58	Brazil
NEH51 to NEH54 BRH51 to BRH54 SEV51 to SEV54 BR2V51 to BR2V54	Andean Brazil North America South Cone	SEH51 to SEH54	North America
NEV55 to NEV58 BRV55 to BRV58 SEH55 to SEH58 BR2H55 to BR2H58	Andean Brazil North America South Cone	SEV55 to SEV58	North America
NEV61 to NEV66 BRH61 to BRH66 SEH61 to SEH66 BR2H61 to BR2H66	Andean Brazil North America South Cone	BR2V61 to BR2V66	South Cone
NEH51 to NEH54 BRH51 to BRH54 SEV51 to SEV54 SEH51 to SEH54 BR2V51 to BR2V54	Andean Brazil North America North America South Cone	BR2H51 to BR2H54	South Cone
NEV55 to NEV58 BRV55 to BRV58 SEH55 to SEH58 SEV51 to SEV56 BR2H55 to BR2H58	Andean Brazil North America North America South Cone	BR2V55 to BR2V58	South Cone
AEH67 to AEH69 and AEH70	East Atlantic	AEV67 to AEV69 and AEV70	East Atlantic
AWV70	West Atlantic	AEH70	East Atlantic
AEV67 to AEV69	East Atlantic	AWH67 to AWH69	West Atlantic