



# Turksat 5A

## Frequency Plan

### Uplink

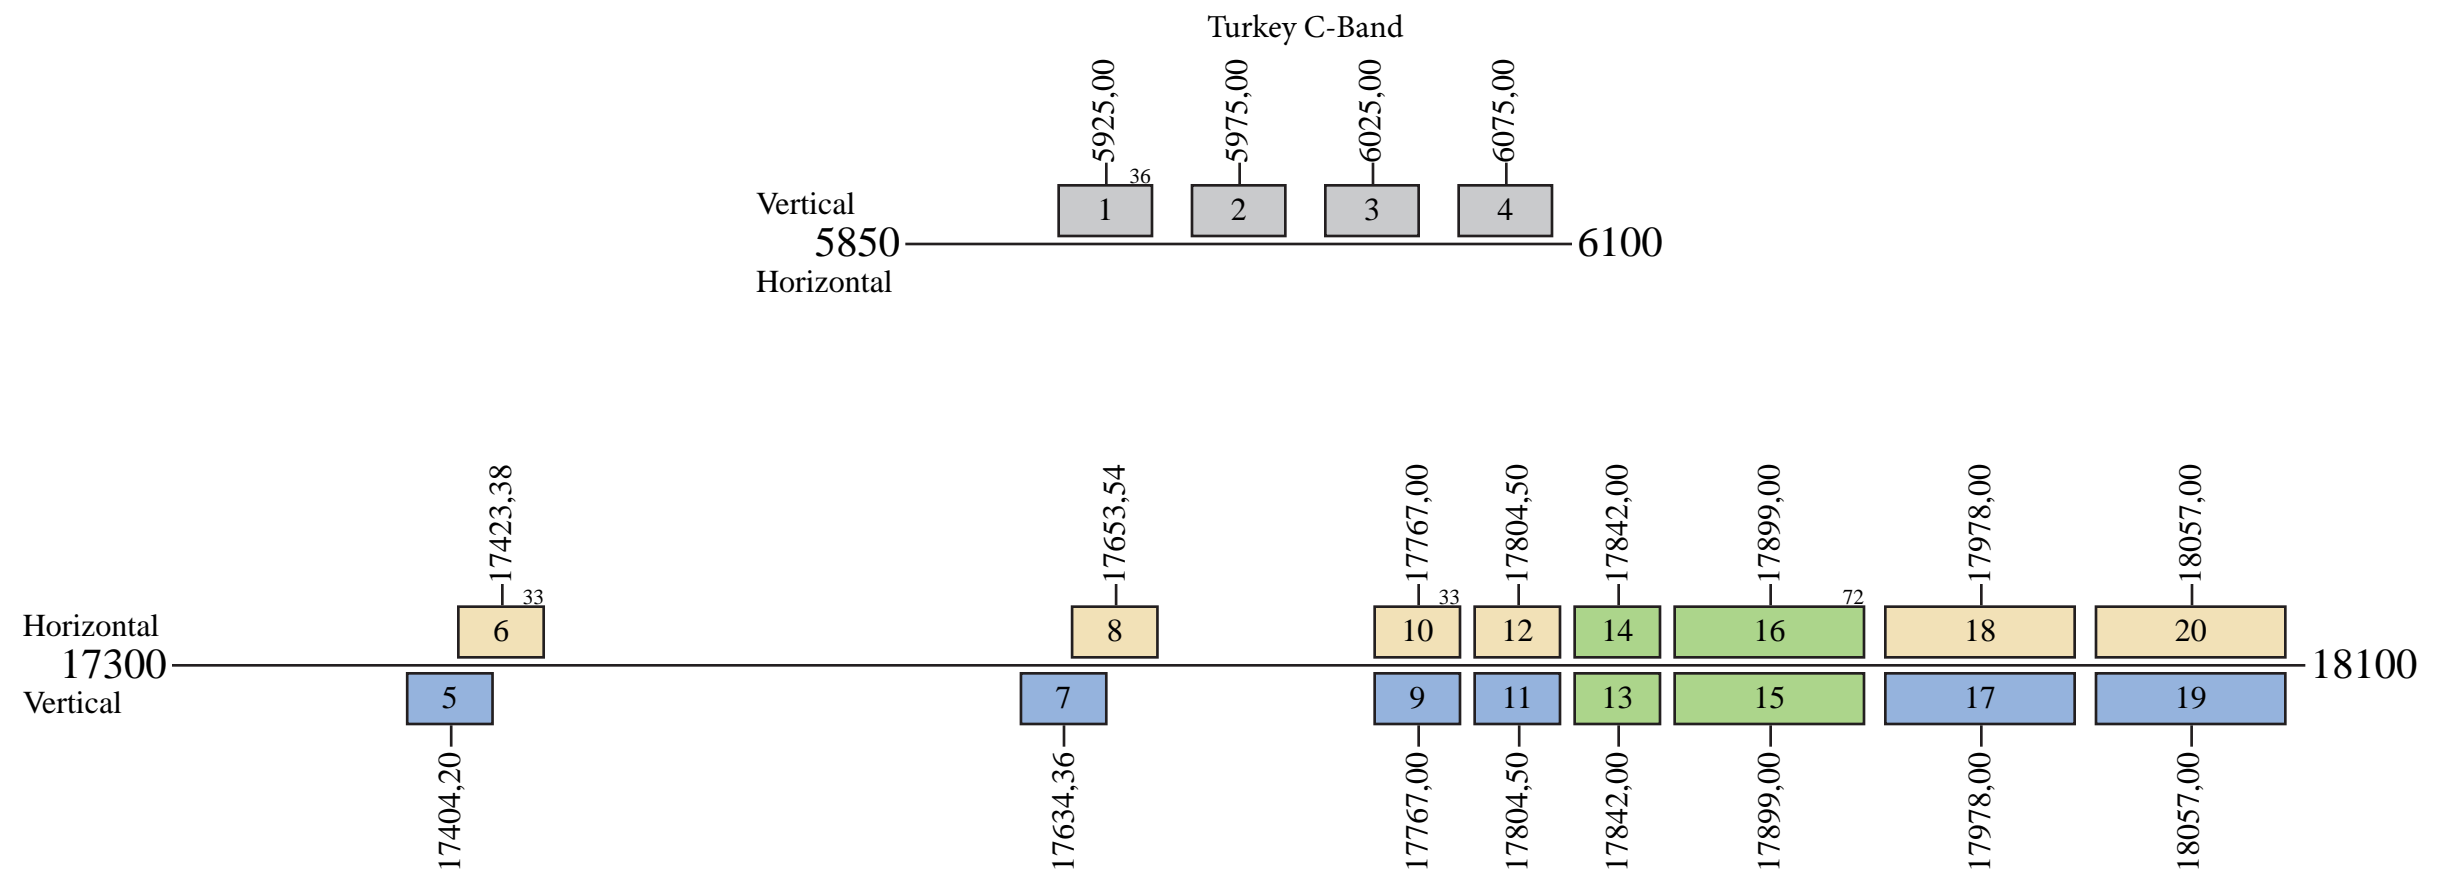

### Downlink

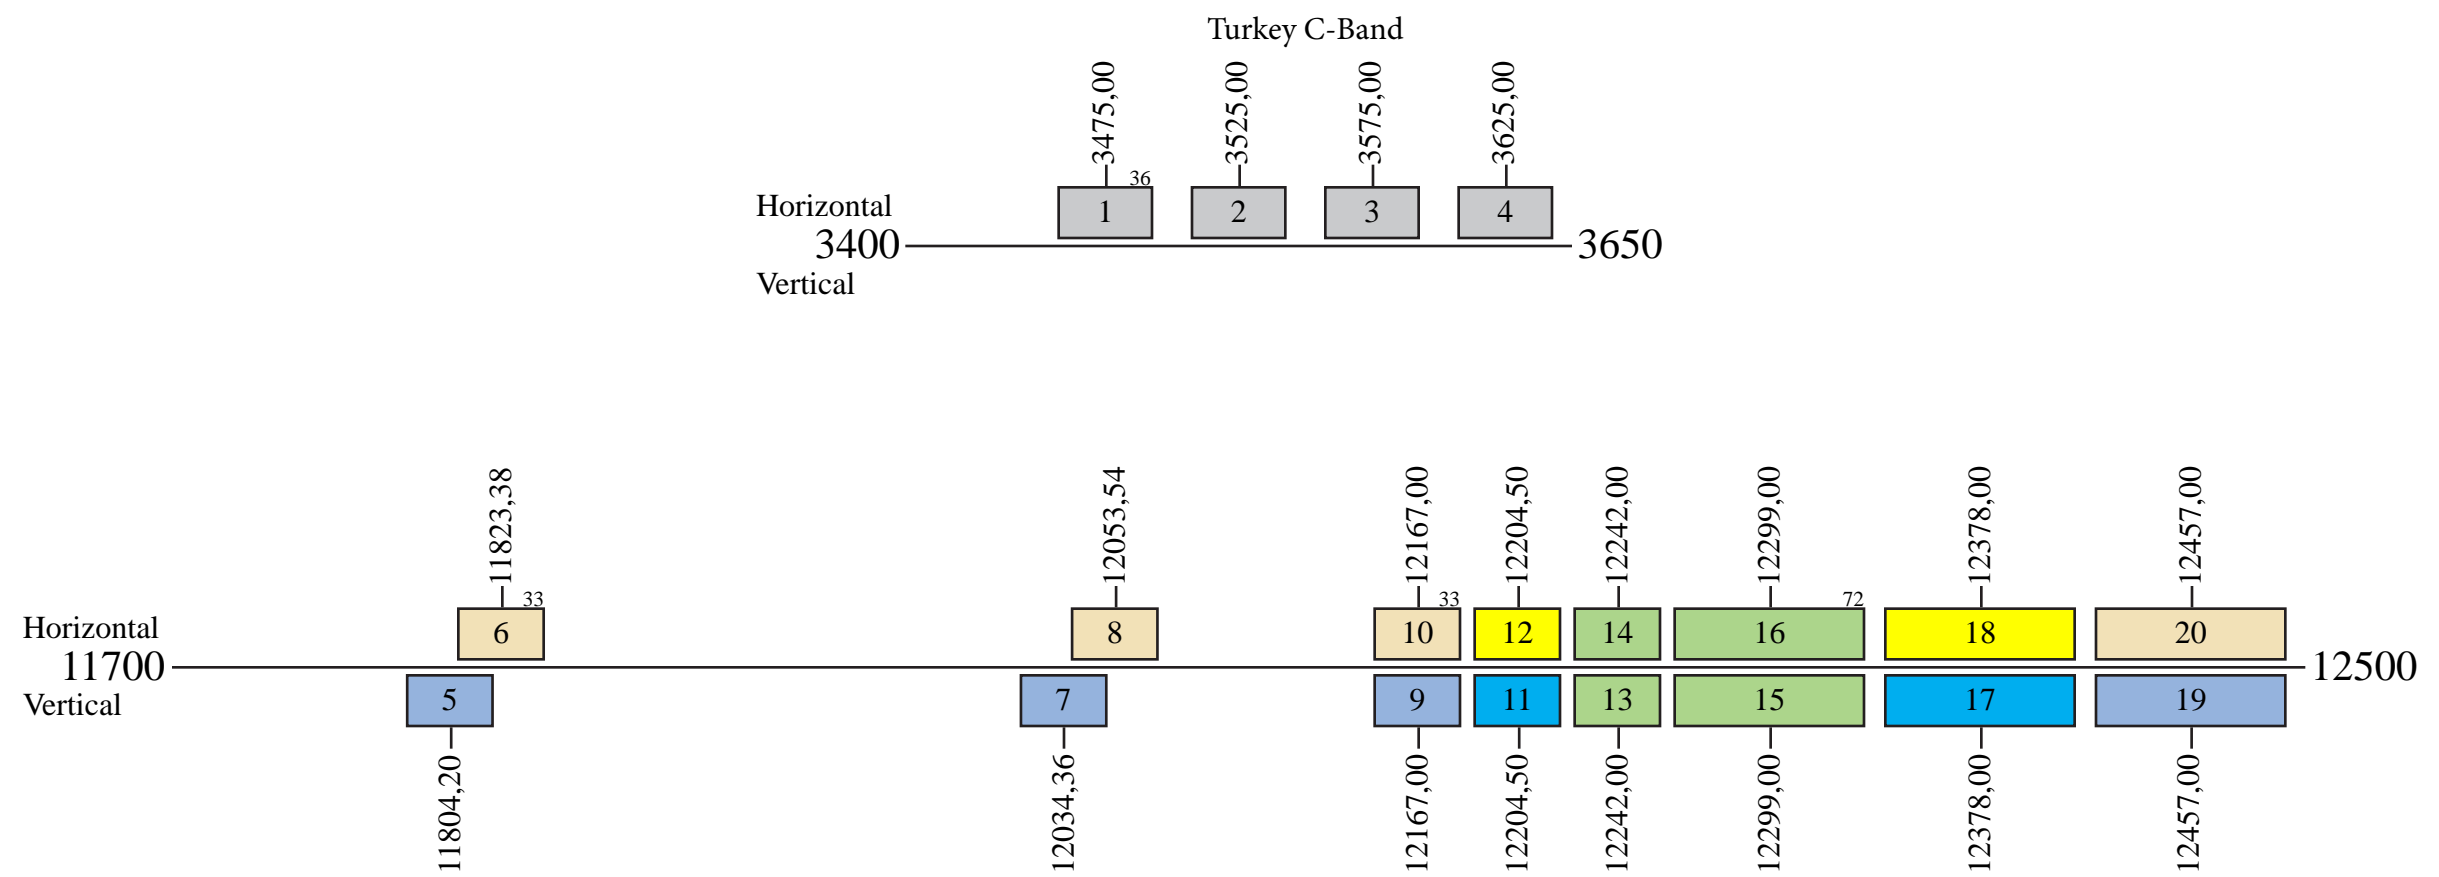

- East Beam
- West Beam
- East Beam or West Beam
- East or Turkey Beam
- West or Turkey Beam

Command 1a: 14000,00 R Omni (LEOP/Emergency)  
 Command 1b: 14000,00 V Global (On-Station)  
 Command 2a: 14500,00 L Omni (LEOP/Emergency)  
 Command 2b: 14500,00 H Global (On-Station)  
 Telemetry 1a: 11696,00 L Omni (LEOP/Emergency)  
 Telemetry 1b: 11696,00 H Global (On-Station)  
 Telemetry 2a: 11696,50 L Omni (LEOP/Emergency)  
 Telemetry 2b: 11696,50 V Global  
 Beacon 1: 11705,00 H Global